

# OPERATING INSTRUCTIONS FOR MODEL 5806ZL SUITESECURE™ UNIT

## TO ARM (TURN ON) YOUR SYSTEM

1. Check the red window above the arming buttons to ensure that all LEDs are off. This indicates that all protection points are normal. If any LED is lit, this indicates that a protection point is off-normal (open) and must be restored (closed) before the suite unit can be armed (turned on).
2. Enter your four digit user code. Press each number button firmly until you hear a beep. If you are not sure that you have entered the digits correctly, press the r button to erase your entry. You may then re-enter your code.
3. Press the **FULL ARM** button. The beeper will start pulsing. Exit the suite promptly. When the beeper stops, the exit time has expired.
4. If you attempt to arm the suite unit with one of the zone LEDs lit, the suite unit will beep once and nothing more will happen. Try and close up the zone or see **ZONE BYPASS** on page 6.

### ZONE ASSIGNMENT TABLE

The following table may be filled out to list the zone input number along with a description of the protection circuit connected to that zone.

When the zone is off-normal then the display will show **ZONE X OPEN**.

ZONE	DESCRIPTION
1	
2	
3	
4	
5	
6	

### QUICK ARM

In certain circumstances the need to identify who armed (turned on) a system is not as important as who disarmed (turned off) the system. This is called QUICK ARM. The suite panel may be Quick Armed by pressing the appropriate button without entering your user code, e.g., if you are remaining home, you may press the **HOME** button; if you are going to sleep, you may press the **SLEEP** button, and if you are leaving the premises, you may press the **FULL ARM** button. If **HOME** or **SLEEP** is selected, the **ARMED/ ALARM** LED will turn on and the system is now armed. If **FULL ARM** is selected, the **ARMED/ ALARM** LED will turn on and the buzzer will sound, indicating that you may leave the premises. When you have selected an arming mode, you must disarm the system (see DISARM on page 4) before you can select a different arming mode.

## TO ENTER YOUR OWN CHOICE USER CODES

The suite panel can be operated by six different users. These persons are called USER 1, USER 2, USER 3, etc. We have arbitrarily defined that USER 1 shall be known as the MASTER USER. All users must be given a 4-digit code. It is important not to forget these codes.

## **SETTING YOUR CODE FOR THE FIRST TIME**

When you take occupancy of your suite, a default user code '1020' has been assigned to user number 1 (the MASTER user). Since all suite units in the building will be given same code, it is essential that you change this code to one that you prefer. It may be your year of birth, the last four digits of your telephone number, or any other number from '1000' to '9999'. As in arming and disarming, press the buttons firmly and slowly (listen for the beep and watch for the \*). Note that a user code cannot begin with a 0 (zero). See DURESS on page 4.

Enter the default code '1020' and then press the **0** button. The **POWER**, **ARMED/ALARM**, and **BYPASS** LEDs will flash to indicate that you are in *programming mode*.

Press the **1** button to select User Codes. The **POWER** LED will turn on steady to indicate that *user code programming* has been selected. Enter a *user number* from 1 to 6. The zone LED corresponding to the user number that you have entered will turn on. Enter a *four-digit code* of your choice from 1000 to 9999. Press each number

## TO ACKNOWLEDGE AN ALARM

If an alarm occurs while you are in your suite, e.g., the smoke detector (if any) trips or the entry door is opened while the panel is SLEEP armed, then to turn off the beeper and the red flashing **ARMED/ALARM** LED, enter your four-digit user code and then press the **DISARM** button.

## DIRECT ENTRY BUTTONS

To the left of the number buttons, notice the buttons labelled **FIRE**, **PANIC** and **MEDICAL**.

These buttons are used to summon the desired service. *It is not necessary to enter your user code to use these buttons*. To activate any of these buttons, firmly **press and hold** the button for about three seconds. A single beep will indicate that the button has been detected. If the **FIRE** or **MEDICAL** buttons are pressed, the **ARMED/ALARM** LED will start flashing and the beeper will sound a different distinctive pattern for each of the buttons. The **PANIC** button is silent. The concierge or alarm monitoring company (if used) will receive a text message indicating which service you have selected and will follow their response procedure.

To turn off the beeper and the red flashing **ARMED/ALARM** LED, enter your four digit user code and then press the **DISARM** button.

## OTHER ARMING MODES

**HOME ARM** - allows you to remain in your suite with part of the protection turned on. The entry/exit door may be used to leave and re-enter, but interior motion sensors (if any) are not on. Opening the door after the exit time has expired will start the entry timer and beeper. You must disarm the suite unit to stop the beeper.

To select HOME ARM: Enter your four digit user code followed by the **HOME** button. The red **ARMED/ALARM** LED turns on immediately. The exit timer is operating and you may leave premises during this time. At the end of the exit time, if the entry/exit door is opened the entry beeper will start and an intrusion alarm will be created unless you disarm the system (see DISARM on page 4) to stop the beeper.

**SLEEP ARM** - allows you to remain in your suite with part of the protection turned on. The entry/exit door is on but interior motion sensors (if any) are not on. Opening the door will cause an *immediate* intrusion alarm. You must disarm the suite unit to stop the beeper.

To select SLEEP ARM: Enter your four digit user code followed by the **SLEEP** button. The red **ARMED/ALARM** LED turns on immediately. If the entry/exit door is opened while the LED is on steady, an intrusion alarm will be created. You must disarm the suite unit (see DISARM on page 4) to stop the beeper.

## EMERGENCY NUMBERS

POLICE: \_\_\_\_\_

FIRE DEPT: \_\_\_\_\_

AMBULANCE: \_\_\_\_\_

DOCTOR: \_\_\_\_\_

HOSPITAL: \_\_\_\_\_

OTHER: \_\_\_\_\_

FOR SERVICE OR HELP WITH YOUR ALARM  
SYSTEM PLEASE CALL:

5806ZL Rev3/04

## **TO DISARM (TURN OFF) YOUR SYSTEM**

1. If you have full armed your suite, then when you enter your suite, the beeper will start sounding. This is to remind you to disarm your system.
2. Enter your four digit user code. Press each number button firmly until you hear a beep. If you are not sure that you have entered the digits correctly, press the **r** button to erase your entry. You may then re-enter your code.
3. Press the **DISARM** button firmly and notice that the red **ARMED/ALARM** LED will turn off. The system is now disarmed (turned off).

## **DURESS**

A Duress function is used to silently summon help at the time of disarming your system.

To create a Duress alarm, enter a **0(zero)** before you enter your normal code sequence. For example, if your normal code is 1259, then when you are disarming your system, enter **01259** and then press the Disarm button. The suite unit will Disarm as normal; however, a silent Duress alarm will be sent to the Concierge.

button firmly and listen for the beep. If at any time you are unsure of the number you have entered, press the **r** button to erase the complete entry. Re-enter the digits again. To save the entry, press the **ENTER (#)** button. Remember the new code!!

The **POWER**, **ARMED/ALARM**, and **BYPASS** LEDs will again flash to indicate that you are still in programming mode.

In a similar manner you may change the codes for the other users while you are in programming mode.

Remember to (a) select *user code programming* mode (1 button), (b) select the *user number* (1 to 6 button), (c) enter the *code* (1000 to 9999), and (d) *save it away* (# button).

When all the desired codes have been entered, press the **r** button and the **POWER**, **ARMED/ALARM**, and **BYPASS** LEDs suite unit will return to their normal status.

## **OTHER KEYPAD FEATURES**

**DOOR CHIME** - allows you to be alerted any time the entry/exit door is opened while the suite unit is disarmed.

To select DOOR CHIME: Firmly press and release the **FUNCTION** button and then the number **1** button. The suite unit will beep for two seconds to indicate that the door chime is now active. Every time the door is opened, the suite unit will beep for two seconds.

To turn the chime feature off, firmly press and release the **FUNCTION** button and then the number **2** button.

**ZONE BYPASS** - allows you to bypass one of your zone inputs, e.g., a window you might want left open while the protection is turned on.

To select ZONE BYPASS: Firmly press and release the **FUNCTION** button and then the number **3** button. The **ZONE BYPASS** LED on the suite unit will be blinking. Firmly press the number button of the zone to be bypassed (1-6) and the blinking LED will now be on steady.

To un-bypass a zone, disarm the suite unit (see DISARM on page 4). The ZONE BYPASS LED will extinguish.

## **OTHER KEYPAD FEATURES** cont'd.

**LAST ALARM DISPLAY** - allows you to view the zone number of the last alarm on your system.

To select LAST ALARM DISPLAY: Firmly press and release the **FUNCTION** button and then the number **4** button. The zone LED corresponding to the number of the last zone that went into alarm will turn on for 10 seconds and then go off.